# Smart Thermostat User Guide

88

that this product is suitable for your heating equipment before installation.

The thermostat is suitable for electric heating, water heating, wall- hung

boilers and boiler temperature control systems, and can be used in smart homes, shopping malls, and industrial operations. Please confirm

8. When the LCD temperature control panel works, it needs stable power

not try to repair it yourself.

supply support. Abnormal power failure and instantaneous power supply

flash off may cause the temperature control panel toclose or not work

Thank you for purchasing our products, please read

3. Please strictly follow the wiring diagram for wiring installation; installation

to the wall, and the nuetral line and the live line should not be reversed to

4.If a hard plastic wire is used in the installation process, it must be bent to

5. The installation position should be about 1.4m away from the ground,

away from other heat sources or flowing air like direct sunlight, wind

the following terms before installation and use:

1. Before installation, please make sure to keep the power off.

Please arrange for professionals to install.

avoid damaging the temperature controller,

which is representative of room temperature.

an appropriate angle in advance.

6.Load shall be provided according to the marked current and overload 7. Please contact the after-sales service for equipment failure, please do

is prohibited.

**FEATURES** 

4 Fashion design blends in with any decor.

Modular design, more convenient installation.

On Appearance

Convennient operation creates convenient life.

normally. No matter what kind of power failure, the power supply system

may stop working. Therefore, when the panel is closed during normal

heating, please start the temperature control panel in time to enter the

which can automatically switch to the working state before power failure

when the power supply is cut off again. The temperature control system

Warning: the wiring must be correctly connected according to the

into the thermostat, otherwise it will cause damage to the device!

electrical wiring diagram. Do not put water, mud and other impurities

power is off, which should be selected according to actual needs.

equipped with electric actuator can keep heating and cut off heating when

9. The LCD temperature control panel has the function of automatic memory.

2 Touch screen display with backlight is easy to read, even in the dark. 3.Glass frame, showing fashion.

Power Consumption: <1W

Set Temp. Range: 5~35 C Display Temp:0-35 C Buttons: Capactive Touch Buttons

Shell Material: PC+ABS (flame retardant)

Screen: negative LCD screen

Ambient Temp./Humiditv:5~95%RH (non condensing)

1.1°C Accuracy keeps temperature within the level you set.

Integrated with Amazon Echo, Google Home, Tmall Genie.

Current Load: 5A (water heating/water boiler/gas boiler)

Croat thermostat group to centralized control.

3.5+2 six periods programmable maximize comfort and economy.


3.User Guide 1pc 4.Floor Sensor (1.5m) 1pc(Floor sensor is Optional)

1.Thermostat 1 pc

2.Screws 2pcs

In the box you will find

### WIRING

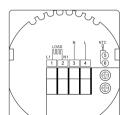

working state.

Accuracy: ±1°C Timing Error: <1%

On Functionality

2.Data memory when power is off.

TECHNICAL DATA


16A (electric heating)

Sensor: NTC thermistor

Power Supply: 110-240VAC, 50-60HZ

# DIMENSION(mm) 9.3 25



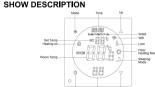

# INSTALLATION

## Keep power off before installation

Step 1. The power module is snapped into the mounting iron plate.

Step 2, Wiring, Load into the appropriate terminals





Step 3. Fasten the mounting plate with screw Step 4. Snap the class panel onto the mounting plate



### INSTRUCTIONS

1.Power On/off: Press (1) to turn the thermostat on/off. 2.Temperature setting: When power is on, press the " > " key to

decrease the setting temperature, and press the " key to increase the setting temperature. The temperature changes by 1 °C each time the button is pressed.

3.Locking your Thermostat

Press and hold the \square for 5 seconds to lock/unlock your thermostat. Hold and press button enter to sleeping mode.

5. Hold and press button v, to display the temp of the external probe.

6 Adjusting/setting the Program Schedules Can use APP for one week prpgramming setting by following: "Setting" - "Weekly-Programming" - "Week Program" in APP.

Advanced options When power is off, press Oand hold for 5 seconds. Then press button

to enter the stepup mode menu. Advanced options table.

e		
00	Operation Mode	2 Floor Heating
02	Built in temperature correction	-9~9°C
03	External temperature correction	-9~9°C
04	Humidity correction	-9~9°C
05	Start up temperature difference	0.5~5*C
06	Low temperature protection	1~5°C ""
07	External temperature protection	35-99°C
80	Sensor Type	Internal Senso 1: External Senso Internal Sensor (Internal sensor to control the temp., external sensor to limit the temp.)
09	Filter replacement reminder	0-365days
10	Power down and restart	0~2 0: shut down 1: Power on 2: Memory
11	Minimum set point	5~35
12	Maximum set point	35~50
14	Standby brightness	10~100

Open circuit of indoor temperature probe sensor Short circuit of indoor temperature probe sensor

External high temperature protection

Range unit

# After power on, the theromostat will be on paring status(WIFI icon flashing quickly).If not flashing please press (1) the icon for about 5 seconds. Install the APP



Wifi connection operation instructions





Figure 1-2 IOS/AndroidS Figure 1-1

Search for ,Smartfife, in the Apple Store orGoogle Play or scan the QR code above with a browser (1-2). Complete the registration and installation according to the guidance of the APP.

For the specific steps of Wifi connection, please scan the QR code below

to get related videos.